




# FIT CHART

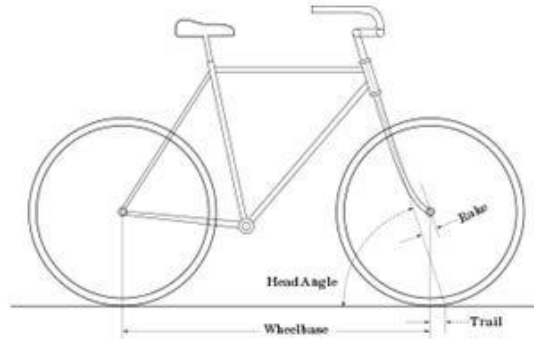

1. Measure Your Wheel Base. Crown Rollers fit wheelbases of 90-118cm.
2. Extend frame to suggested pin hole in chart below:  
 Note: Intent is to have front wheel axle 1-2cm behind the front roller axle.  
 If between sizes use longer position.]

Wheel Base (cm)	Wheel Base (in)	Hole Position	Visible Holes (for reference)
90.6	35.7	1	0
91.8	36.1	2	0
93	36.6	3	0
94.2	37.1	4	0
95.4	37.6	5	0
96.6	38.0	6	0
97.8	38.5	7	1
99	39.0	8	2
100.2	39.4	9	3
101.4	39.9	10	4
102.6	40.4	11	5
103.8	40.9	12	6
105	41.3	13	7
106.2	41.8	14	8
107.4	42.3	15	9
108.6	42.8	16	10
109.8	43.2	17	11
111	43.7	18	12
112.2	44.2	19	13
113.4	44.6	20	14
114.6	45.1	21	15
115.8	45.6	22	16
117	46.1	23	17